

RAM 450mm Heavy Duty Pedestal Fan (18"") - 3 Speed

Parts List

pictures required

1. Rear grille
2. Front grille
3. 450mm (18") Fan blade
4. Oscillate switch
5. Solid base
6. Adjustable shaft
7. Rear motor guard
8. Adjustable head bolt
9. Shaft tightening bolt
10. On/Off & Speed dial
11. Front face plate
12. Grille band

Assembly

(a Philips screwdriver is needed for assembly, not included)

1. Carefully remove all parts from the outer box and remove all plastic packaging. Please dispose of packaging in a responsible manner.
2. Remove the lever bolt and washer from the bottom of the adjustable shaft, then push the bottom of the shaft into position in the solid base cover.
3. Ensuring the solid base and cover are lined up properly, re-fit the washer and lever bolt and tighten by hand only.
4. Slacken the blue twist lock, and slide the inner shaft out to full extension, and tighten again to secure. The height can be adjusted once fully assembled.
5. Secure the fan head onto the adjustable shaft using the shaft tightening bolt at the bottom of the fan head.
6. Remove the four grille screws from the front of the fan head. With the handle at the top, line up the four holes on the rear grille then replace and tighten the screws to fix the rear grille in place.

7. Slide the fan blade onto the motor shaft. Line the screw up with the flat panel on the shaft. Keep the end of the shaft flush with the front of the fan blade and tighten to secure.

8. Clip the front face-plate onto the centre of the front grille.

9. Remove the plastic cover from the tightening nut of the grille band (in position around the front grille).

10. Line up the front grille with the rear grille, with the tightening nut at the bottom.

11. Starting at the top, clip the band over the rim of both grilles all the way around.

12. Tighten to secure and replace the plastic cover.

Your fan is now ready to use