


Secret Smoke[®]

MANUAL - MINI WASHING MACHINE



PARTS

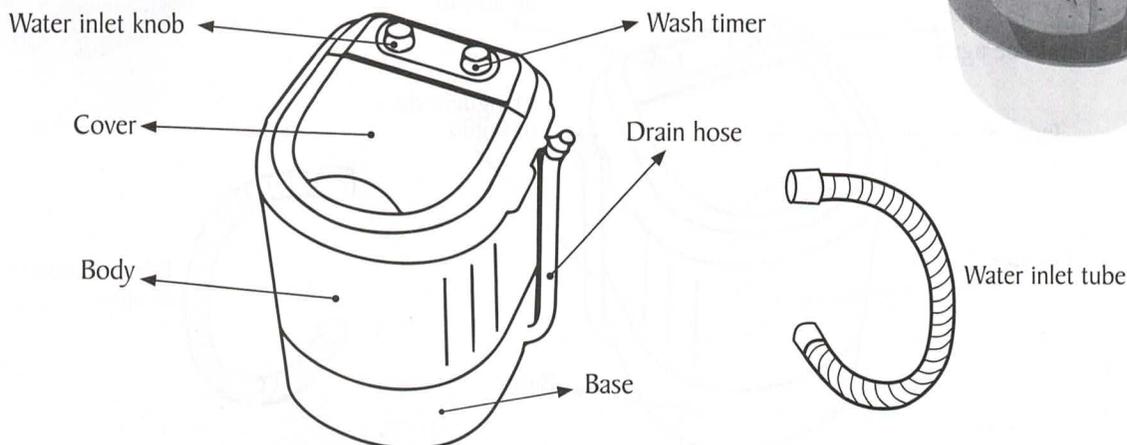

Read this manual carefully before starting to operate the machine and keep it properly.

SAFETY ADVICE

- Do not install the washer in the bathroom or any other wet place.
- Do not install the washer on an inclined or bumpy place. Keep it apart from the Wall at least 2 cm.
- Never put hands into the washer while washing.
- Keep washer away from sunny places.
- Do not put water on the control panel.
- Keep children away from the washing machine.
- Do not use water hotter than 50°C. It could change shape of the plastic parts causing malfunction.
- Do not place carpets or soft objects under the washer. Ventilation outlet should be always free.
- Do not place flame objects near the washer, cigarettes or sharp objects on the washer.

CAUTIONS

- Connected washer to a grounded outlet.
- Use only plugs with rated electric current higher than 5 Amp.
- Do not cut, twist, damage the cable or hang heavy things on it, to prevent cuts in the power supply.
- Do not unplug the washer with wet hands.
- This device should not be used by people with lack of experience and knowledge, unless they are supervised or have been instructed on the use of the device by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- If power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid hazards.

BEFORE FIRST USE

- Remove the foam from the base. Keep ventilation outlet always free.
- Make sure that the water inlet tube connects the tap outlet with the washer inlet.
- Keep drain hose hang up.

INSTRUCTIONS FOR USE

1. Put the washing machine in a high place.
2. Put water and ice into the washing machine until the temperature of the water is close to 4 °C.
3. Fill the mesh bag with the material to which the resin is to be extracted.
4. Switch on the washing machine (10 minutes at least).
5. Once the washing is finished, remove the mesh bag and drain it well on the washing machine. Be aware that the drained water falls into the washing machine.
6. Using the drain pipe, pour the water into the bucket. The water should go through the mesh bags of different sizes, always using the indicated order.
7. Drain well the accumulated material in the mesh bags. Then, remove it and let it dry for 24 hours at least.
8. For enlarge the life of the mesh bags, clean them carefully after each use.