



**VENTS INLINE FANS IN  
SOUND-INSULATED CASING  
USER'S MANUAL**

[www.ventilation-system.com](http://www.ventilation-system.com)



**TT Silent-M**



**VENTS**

## CONTENTS

Delivery set .....	6
Technical data.....	6
Product sales .....	6
Designation key .....	7
Installation and set-up.....	8
Connection to power mains .....	14
Electronics operation algorithm .....	19
Technical maintenance.....	20
Troubleshooting.....	21
Storage and transportation regulations.....	21
Manufacturer's warranty .....	22

This user's manual is a main operating document intended for technical, maintenance, and operating staff.

The manual contains information about purpose, technical details, operating principle, design, and installation of the TT Silent-M unit and all its modifications.

Technical and maintenance staff must have theoretical and practical training in the field of ventilation systems and should be able to work in accordance with workplace safety rules as well as construction norms and standards applicable in the territory of the country.

The information in this user's manual is correct at the time of the document's preparation.

The Company reserves the right to modify the technical characteristics, design, or configuration of its products at any time in order to incorporate the latest technological developments.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means in any information search system or translated into any language in any form without the prior written permission of the Company.



**READ THE USER'S MANUAL CAREFULLY BEFORE PROCEEDING WITH INSTALLATION WORKS.  
COMPLIANCE WITH THE MANUAL REQUIREMENTS ENSURES RELIABLE OPERATION AND LONG  
SERVICE LIFE OF THE UNIT.**

**KEEP THE USER'S MANUAL AVAILABLE AS LONG AS YOU USE THE UNIT. YOU MAY NEED TO RE-READ  
THE INFORMATION ON THE PRODUCT SERVICING.**



**FOLLOW THE USER'S MANUAL REQUIREMENTS TO ENSURE DURABLE AND TROUBLE-FREE OPERATION OF THE UNIT.**

Disconnect the unit from power supply prior to any connection, servicing, maintenance, and repair operations.

**Only qualified electricians with a work permit for electrical units up to 1000 V are allowed for installation and maintenance. The present user's manual should be carefully read before beginning works.**

- Single-phase power mains must comply with the acting local electrical norms and standards.
- Fixed electrical wiring must be equipped with an automatic circuit breaker.
- The unit must be connected to power mains through a QF automatic circuit breaker integrated into the fixed wiring system. The gap between the circuit breaker contacts on all poles must be not less than 3 mm. Check the unit for any visible damages of the impeller and the casing before starting installation. The casing internals must be free of any foreign objects that can damage the impeller blades.
- While mounting the unit, avoid compression of the casing! Deformation of the casing may result in the motor jam and noisy operation. Misuse of the unit and any unauthorised modifications are not allowed.
- Take steps to prevent ingress of smoke, carbon monoxide, and other combustion products into the room through open chimney flues or other fire-protection devices. Sufficient air supply must be provided for proper combustion and exhaust of gases through the chimney of fuel burning

equipment to prevent back drafting. Transported air must not contain any dust or other solid impurities, sticky substances, or fibrous materials.

- Do not use the unit in a hazardous or explosive environment containing spirits, gasoline, insecticides, etc.
- Do not close or block the intake or extract vents in order to ensure the efficient air flow.
- Do not sit on the unit and do not put objects on it.
- The unit is allowed to be used by children aged from 8 years old and above and persons with reduced physical, sensory, or mental capabilities or no experience and knowledge provided that they have been given supervision or instruction regarding safe use of the unit and understand the risks involved.
- Do not allow children to play with the unit.



**THE PRODUCT MUST BE DISPOSED SEPARATELY AT THE END OF ITS SERVICE LIFE.  
DO NOT DISPOSE THE UNIT AS UNSORTED MUNICIPAL WASTE.**

## DELIVERY SET

Fan	- 1 pc.
Screws with dowels	- 4 pcs.
Plastic screwdriver (only for the models with a timer)	- 1 pc.
User's manual	- 1 pc.
Packing box	- 1 pc.

## TECHNICAL DATA

The product described herein is a mixed-flow inline fan for supply or extract ventilation of premises heated during winter time. The fan is designed for connection to ø 100, 125, 150, 160, 200, 250 and 315 mm air ducts.

The fan is equipped with a double-speed motor.

An external control unit can be connected to the fan.

The fan design is constantly being improved, thus some models may be slightly different from those described in this manual.

## PRODUCT SALES

The product is sold in specialized and retail trade organizations.

## DESIGNATION KEY

**TT Silent M XXX X X**

### Unit voltage:

\_ — 220-240 V/50 (60) Hz (by default)

YYYV/ZZ Hz — mains parameters other than the default ones

### Options:

T: timer

U: speed controller with an electronic thermostat and a temperature sensor integrated into the air duct. Equipped with a power cord and an IEC C14 electric plug. Temperature-based operation logic

Un: speed controller with an electronic thermostat and external temperature sensor fixed on 4 m cable. Equipped with a power cord and an IEC C14 electric plug. Temperature-based operation logic

U1: speed controller with an electronic thermostat and a temperature sensor integrated into the air duct. Equipped with a power cord and an IEC C14 electric plug. Timer-based operation logic

U1n: speed controller with an electronic thermostat and external temperature sensor fixed on 4 m cable. Equipped with a power cord and an IEC C14 electric plug. Timer-based operation logic

P: built-in smooth speed controller and power cord with an IEC C14 electric plug

R: power cord with an IEC C14 connector

V: speed switch

### Outlet spigot diameter [mm]

### Casing material:

M — metal

### Casing design:

Silent – sound-insulated


### Fan model

For a description of the fan options, see the «Electronics operation algorithm» section.

## INSTALLATION AND SET-UP


The fan is suitable both for horizontal or vertical mounting on the floor, on the wall or on the ceiling. While mounting the fan, provide extra protection against water ingress, such as:

- For the top mounting install an outer protecting hood above.
- For any mounting position connect an air duct on both sides of the fan.

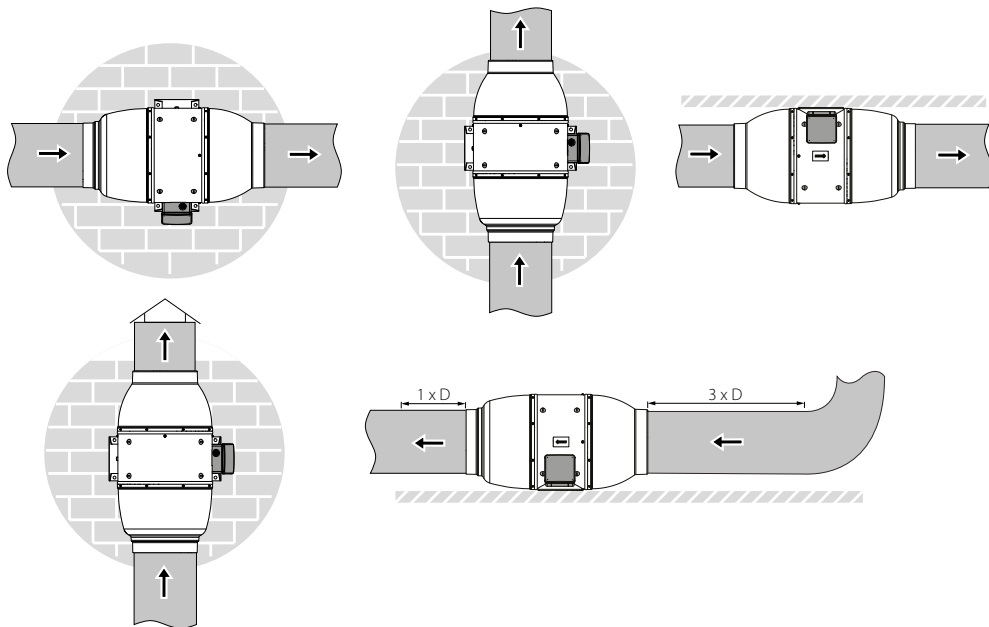





Cut off power supply and make sure electricity has been turned off. Mark the holes for fixing the fan and the power cable.

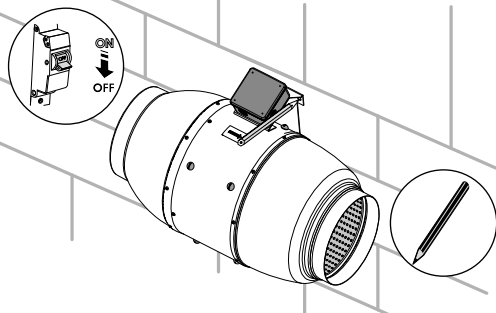


Lead the power cable to the ventilation hole, drill the mounting holes and install the dowels.

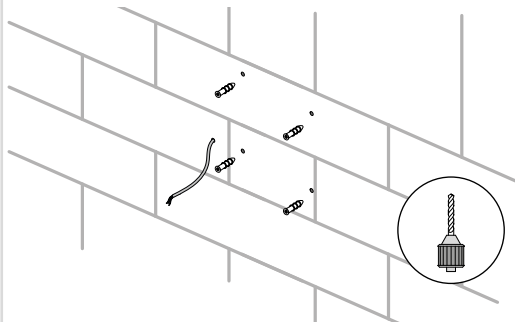


Fix the fan with the screws.

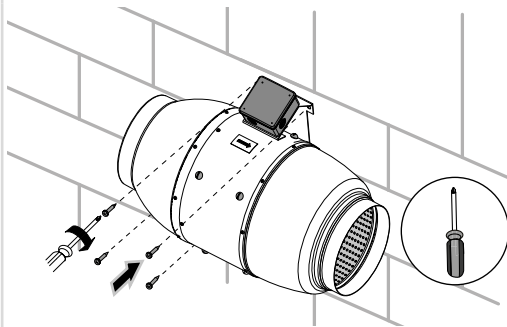


For any mounting position connect an air duct on both sides of the fan.

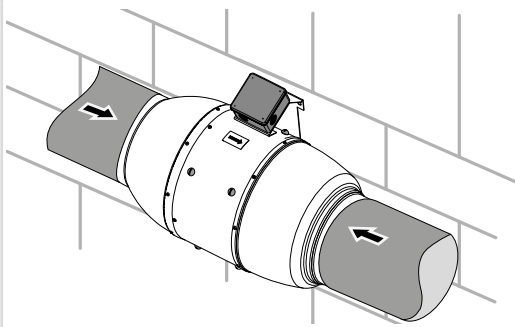


Cut off power supply and make sure electricity has been turned off. Remove the cover of the fan.

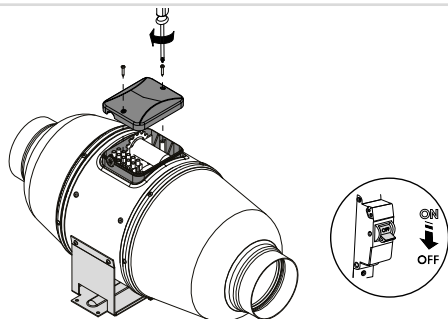





Connect the power cord wires to the terminal block and assemble the fan in reverse order.




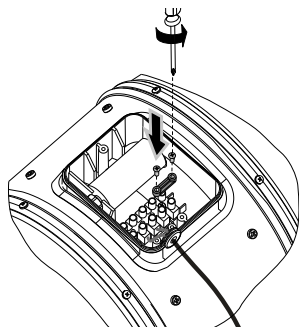


Supply power to the fan.

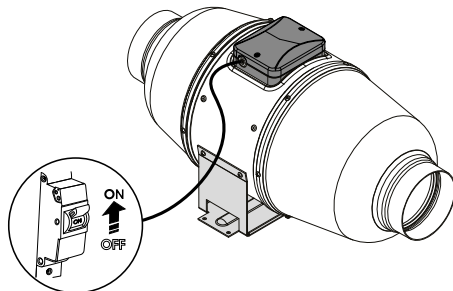


### Mounting sequence for different fan models

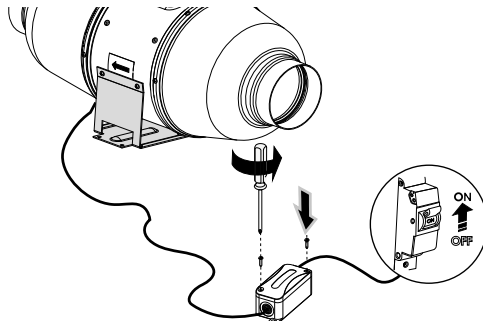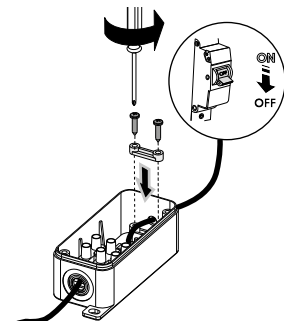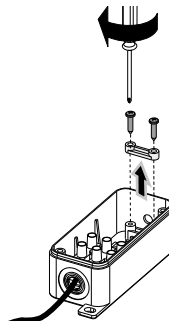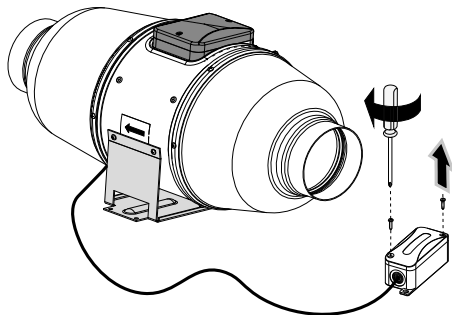


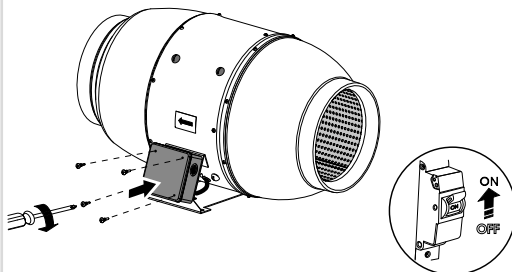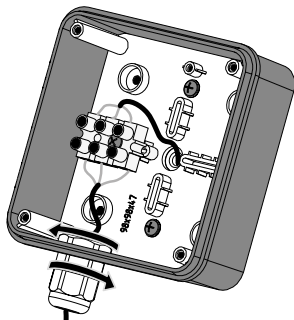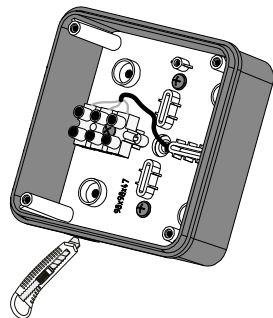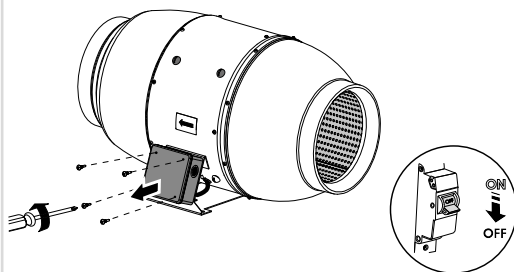


**TT Silent-M XXX T**

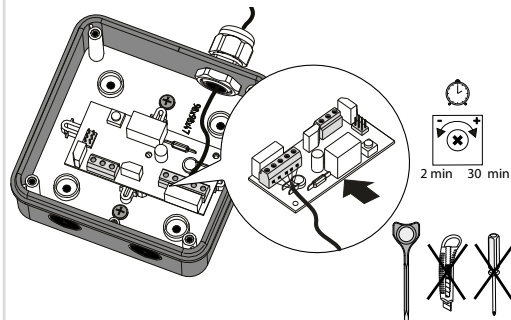


**TT Silent-M XXX RV**

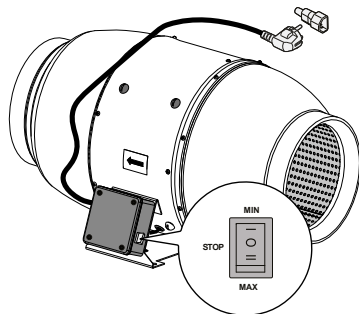

**TT Silent-M XXX U(U1)**

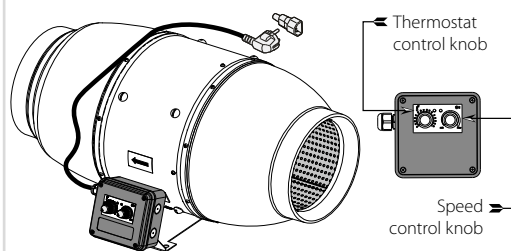

**TT Silent-M XXX P**

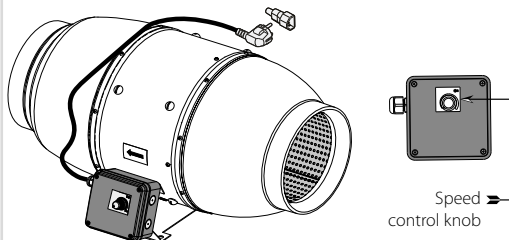

## CONNECTION TO POWER MAINS

The fan is rated for connection to single-phase AC 220-240 V/50 (60) Hz.

### TERMINAL DESIGNATIONS ON WIRING DIAGRAMS

**L1** — minimum speed terminal

**L2** — maximum speed terminal


**QF** — automatic circuit breaker

**S** — external speed controller


**ST** — external switch

**SW** — control mode switch


Automatic circuit breaker  
designation in the wiring diagram

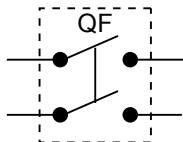


Automatic  
circuit breaker

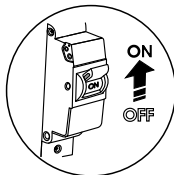

Designation of the external switch on  
the wiring diagram

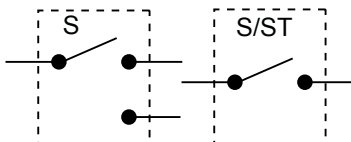


External switch

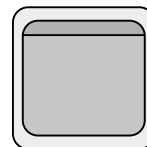


**DO NOT USE A METAL SCREWDRIVER, KNIFE, ETC. FOR ADJUSTMENT  
OPERATIONS NOT TO DAMAGE THE CIRCUIT BOARD.**


# TT Silent-M 100/125

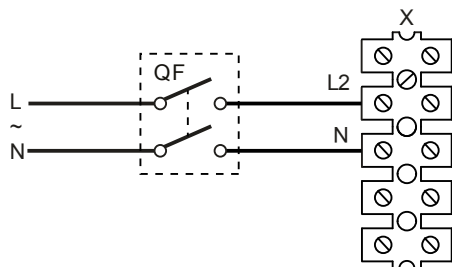


Max

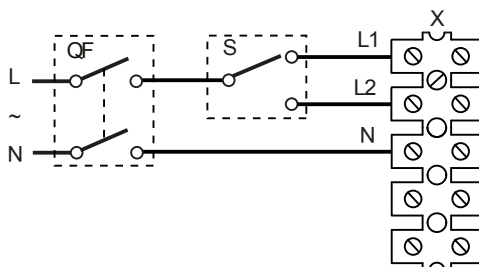


Max/min

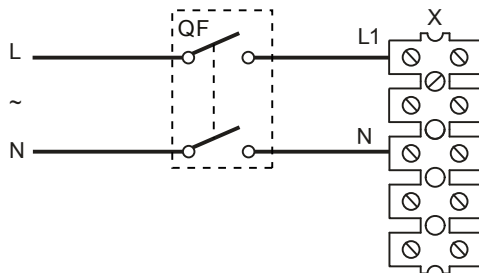


Min

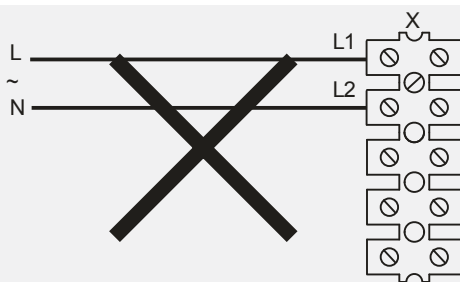


# TT Silent-M 150/160/200/250/315

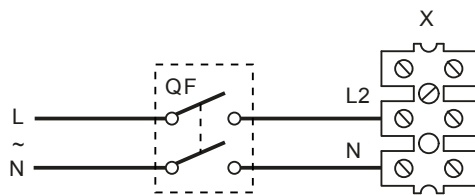


Max

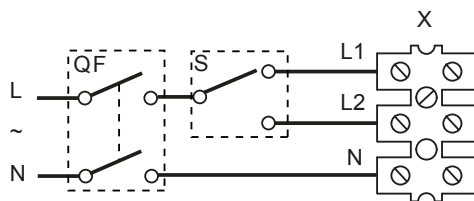

Max/min

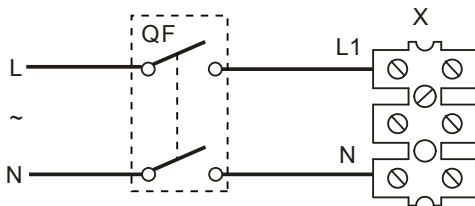


Min

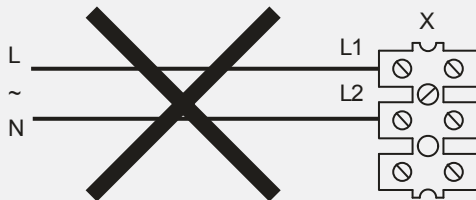




# TT Silent-M 100/125/150/160/200/250/315 T

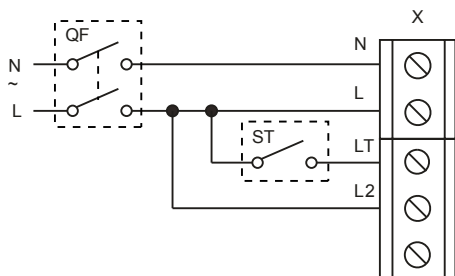


Max

terminal block for 5 contacts

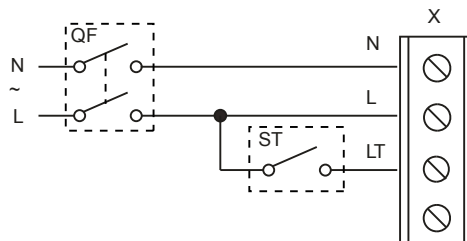


terminal block for 4 contacts

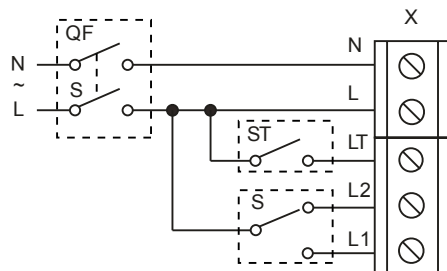


Max/min

terminal block for 5 contacts

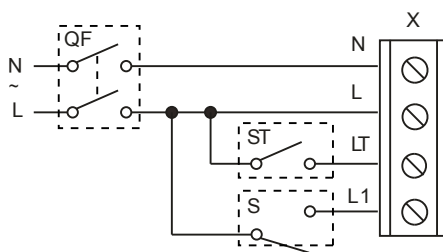


terminal block for 4 contacts

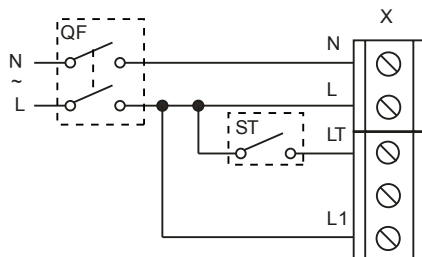


Min

terminal block for 5 contacts

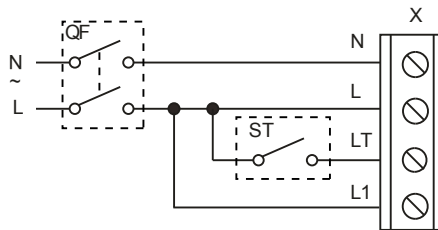

terminal block for 4 contacts

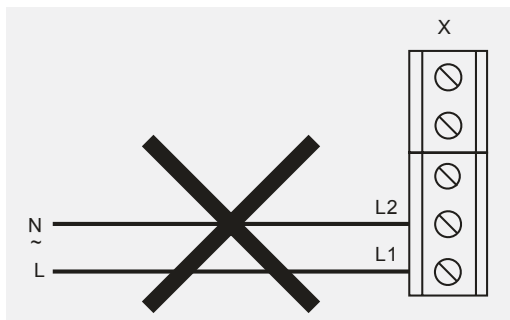

## ELECTRONICS OPERATION ALGORITHM

The **TT Silent-M XXX T** fan activates upon control voltage application to input terminal **LT** by an external switch (e.g. indoor light switch). After the control voltage is off, the fan continues to operate within the set time period adjustable from 2 to 30 minutes by the timer. To adjust the fan turn-on delay time, turn the control knob **T** clockwise to increase and counter-clockwise to decrease the turn-on delay time respectively.

The **TT Silent-M XXX U (U1)** fan is equipped with an electronic module **TSC** (speed controller with electronic thermostat) for automatic motor speed control depending on the air temperature.

The terminal compartment incorporates 2 control knobs:

- for setting the motor speed
- for setting the electronic thermostat

The LED indicator is placed at the front panel of the fan to show the thermostat operating status. To set the thermostat threshold, rotate the thermostat control knob clockwise to increase or counter-clockwise to decrease the temperature set point accordingly. To set the fan speed (air capacity), rotate the speed control knob in the same way.

### The fan operating logic may be based on temperature or timer indications:


- Temperature-based operating logic (**TT Silent-M XXX U model**): is used to keep air temperature to within 2 °C. In this case the fan switches are rare. When the temperature reaches the set point set by the temperature controller, the fan switches to the maximum speed. The fan runs with the speed set by the speed controller if the temperature drops 2 °C below the set point or if the initial temperature is below the set point.
- Timer-based operating logic (**TT Silent-M XXX U1**) is used for exact air temperature control. The motor changes its speed more frequent as compared to the temperature-based logic, but one speed interval continues at least 5 minutes. The fan switched to maximum speed as the temperature reaches the temperature controller set point. If the temperature drops below the set point, the fan switches to the speed set by the speed controller 5 min. after the timer countdown. If the initial temperature is below the set point, the fan starts operating at set speed immediately.

The **TT Silent-M XXX P** fan is equipped with a speed controller that enables switching the fan on/off and smooth speed (air flow) regulation from minimum to maximum value.


## TECHNICAL MAINTENANCE

The fan maintenance periodicity is at least once per 6 months.  
Maintenance steps:


Disconnect the fan from power supply and make sure electricity has been turned off. Disconnect an air duct on both sides of the fan.

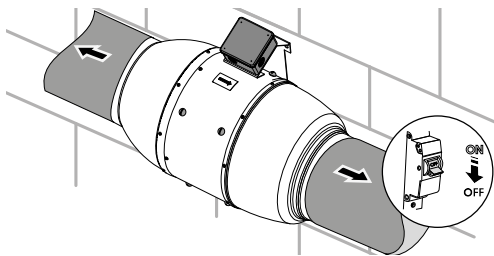


Clean the fan with a soft dry cloth or a brush.

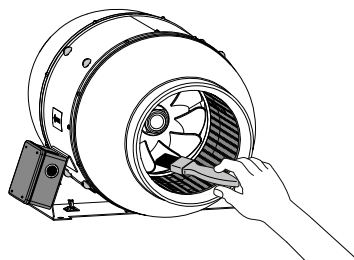

Wipe the fan surfaces dry.

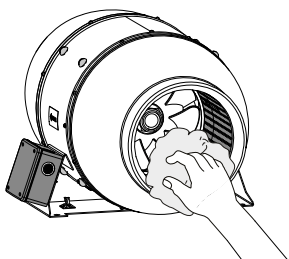

Connect an air duct on both sides of the fan. Supply power to the fan.

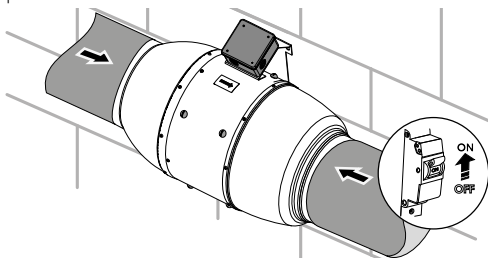

**CAUTION! Do not allow water or liquid come into contact with electric components!**

## TROUBLESHOOTING

Problem	Possible reasons	Troubleshooting
When the unit is connected to power mains, the fan does not rotate and does not respond to any controls.	No power supply.	Make sure the power supply line is connected correctly, otherwise troubleshoot the connection error.
	Internal connection fault.	Contact the Seller.
Low air flow.	The ventilation system is clogged.	Clean the ventilation system.
Increased noise, vibration.	The impeller is clogged.	Clean the impeller.
	The fan is not secured well or is not mounted properly.	Troubleshoot the installation error.
	The ventilation system is clogged.	Clean the ventilation system.

## STORAGE AND TRANSPORTATION REGULATIONS

- Store the unit in the manufacturer's original packaging box in a dry closed ventilated premise with temperature range from +5 °C to + 40 °C and relative humidity up to 70 %.
- Storage environment must not contain aggressive vapours and chemical mixtures provoking corrosion, insulation, and sealing deformation.
- Use suitable hoist machinery for handling and storage operations to prevent possible damage to the unit.
- Follow the handling requirements applicable for the particular type of cargo.
- The unit can be carried in the original packaging by any mode of transport provided proper protection against precipitation and mechanical damage. The unit must be transported only in the working position.
- Avoid sharp blows, scratches, or rough handling during loading and unloading.
- Prior to the initial power-up after transportation at low temperatures allow the unit to warm up at room temperature for at least 3-4 hours.

## MANUFACTURER'S WARRANTY

The product is in compliance with EU norms and standards on low voltage guidelines and electromagnetic compatibility. We hereby declare that the product complies with the provisions of Electromagnetic Council Directive 2014/30/EU, Low Voltage Directive 2014/35/EU and CE-marking Directive 93/68/EEC. This certificate is issued following test carried out on samples of the product referred to above.

The manufacturer hereby warrants normal operation of the unit for 60 months after the retail sale date provided the user's observance of the transportation, storage, installation, and operation regulations. Should any malfunctions occur in the course of the unit operation through the Manufacturer's fault during the guaranteed period of operation, the user is entitled to get all the faults eliminated by the manufacturer by means of warranty repair at the factory free of charge. The warranty repair includes work specific to elimination of faults in the unit operation to ensure its intended use by the user within the guaranteed period of operation. The faults are eliminated by means of replacement or repair of the unit components or a specific part of such unit component.

### **The warranty repair does not include:**

- routine technical maintenance
- unit installation/dismantling
- unit setup

To benefit from warranty repair, the user must provide the unit, the user's manual with the purchase date stamp, and the payment paperwork certifying the purchase. The unit model must comply with the one stated in the user's manual. Contact the Seller for warranty service.

### **The manufacturer's warranty does not apply to the following cases:**

- User's failure to submit the unit with the entire delivery package as stated in the user's manual including submission with missing component parts previously dismounted by the user.
- Mismatch of the unit model and the brand name with the information stated on the unit packaging and in the user's manual.
- User's failure to ensure timely technical maintenance of the unit.
- External damage to the unit casing (excluding external modifications as required for installation) and internal components caused by the user.
- Redesign or engineering changes to the unit.

- Replacement and use of any assemblies, parts and components not approved by the manufacturer.
- Unit misuse.
- Violation of the unit installation regulations by the user.
- Violation of the unit control regulations by the user.
- Unit connection to power mains with a voltage different from the one stated in the user's manual.
- Unit breakdown due to voltage surges in power mains.
- Discretionary repair of the unit by the user.
- Unit repair by any persons without the manufacturer's authorization.
- Expiration of the unit warranty period.
- Violation of the unit transportation regulations by the user.
- Violation of the unit storage regulations by the user.
- Wrongful actions against the unit committed by third parties.
- Unit breakdown due to circumstances of insuperable force (fire, flood, earthquake, war, hostilities of any kind, blockades).
- Missing seals if provided by the user's manual.
- Failure to submit the user's manual with the unit purchase date stamp.
- Missing payment paperwork certifying the unit purchase.



**FOLLOWING THE REGULATIONS STIPULATED HEREIN WILL ENSURE A LONG AND TROUBLE-FREE OPERATION OF THE UNIT.**



**USER'S WARRANTY CLAIMS SHALL BE SUBJECT TO REVIEW ONLY UPON PRESENTATION OF THE UNIT, THE PAYMENT DOCUMENT AND THE USER'S MANUAL WITH THE PURCHASE DATE STAMP.**












Quality Inspector's Stamp




Sold by  
(name and stamp of the seller)



Manufacture Date



Purchase Date



Certificate of acceptance

100 ☐

125 ☐ V ☐

150 ☐ RV ☐

TT Silent-M 160 ☐ T ☐

200 ☐ U ☐ 1 ☐ n ☐

250 ☐ P ☐

315 ☐

The fan is recognized as serviceable